

Standard Curry Classroom Lectern

A Yeti Microphone

Used to capture discussion in the classroom. Students may need to speak louder to be heard in Zoom.

B Discussion Camera*

Monitor-mounted camera that can face either the class or the instructor

C Instructor Camera*

Ceiling-mounted pan/tilt/zoom camera with preset viewing angles

D Instructor Camera Remote

Use the remote to change viewing angles on the Instructor Camera

*In the Zoom camera menu, both cameras are called "HuddleCam HD"

E Laptop HDMI Cable with Adapter Ring:





Mini-DisplayPort (Microsoft Surface, older Macs)



DisplayPort (Larger laptops)



USB-C (Macs and most new computers)

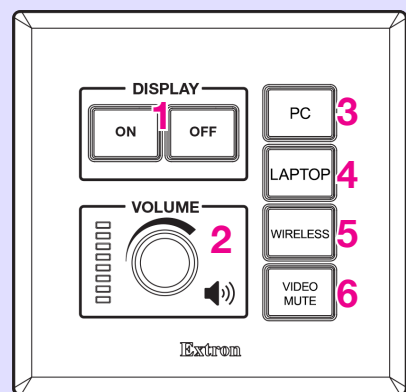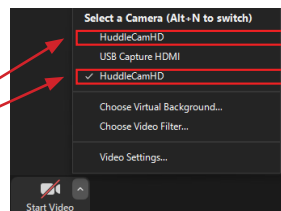

If you are in a Zoom meeting, you must use the PC input


To show your laptop or device in a Zoom meeting, follow the **Wireless Screen Sharing in Zoom** instructions in this guide.

Using the Wall Controller


- 1 Display On/Off**
Turns the projector on or off
- 2 Volume Control**
Turn the dial clockwise for louder, counterclockwise for softer
- 3 PC Input**
Shows the instructor PC on the projector (use this for Zoom)
- 4 Laptop Input**
Shows the device connected to the Laptop HDMI Cable (E) on the projector.
- 5 Wireless**
Shows the AirTame wireless video sharing system on the projector
- 6 Video Mute**
Sends a blank image to the projector (where available)

Troubleshooting


1. Make sure the Yeti Microphone (A) is plugged in and *GAIN* and *PATTERN* are set as follows:

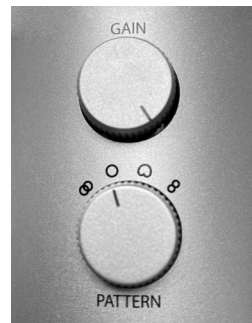

2. Make sure Zoom audio settings are set as follows and is not muted:

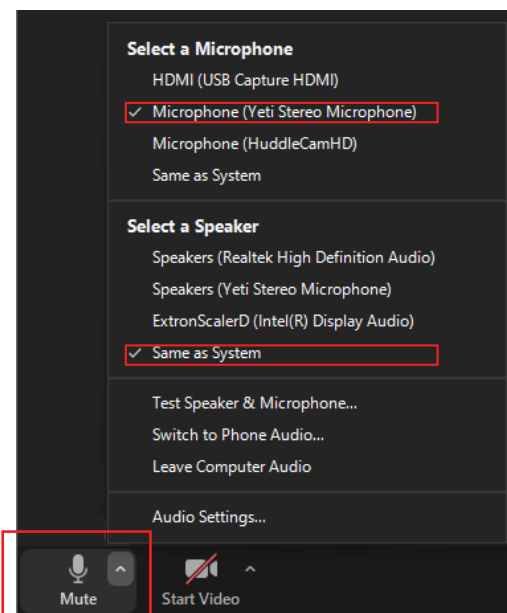

3. Make sure to click *Start Video*

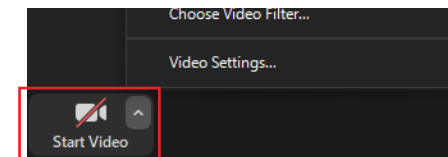


4. Press the Mute button on the Yeti Microphone if it is flashing red:



Switching Between Instructor Camera and Discussion Camera

1. Click the ^ next to *Start/Stop Video* on the bottom of the Zoom window

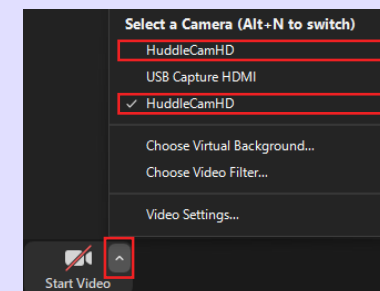

2. Click the unchecked *HuddleCamHD* camera to switch

Changing Instructor Camera Viewing Angle

The Instructor camera in the ceiling has a number of preset whiteboard viewing angles that can be recalled from the remote (D) on the lectern.


Preset 1 is always set to the whiteboard with the projector. *Presets 2-9* are set to the other whiteboards in the spaces, where applicable.

To change presets:

1. Press the preset number on the remote control (D)

2. Press the *Call* button

You can manually set the pan, tilt, and zoom of the camera using the directional and zoom buttons.

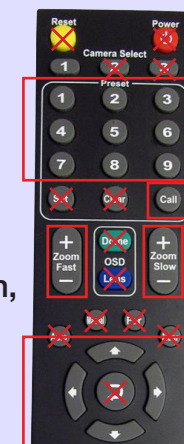



Additional Troubleshooting:

If you see the camera in Zoom but it is not moving, press *Camera Select 1* at the top of the remote. Then, use the the preset or directional buttons to move the camera.

If the camera moves with the directional buttons but not the preset buttons, please contact the Tech Center.

Wireless Screen Sharing in Zoom

 1. Start or join a Zoom meeting from the instructor PC
2. Click *Share Screen*
3. Click the *Advanced* tab, then click *Content from 2nd Camera*, then *Share*. Make sure *Share computer sound* is checked

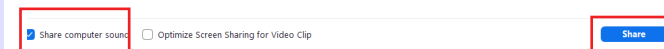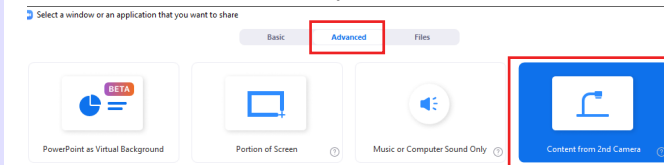

4. Click the *Switch Camera* button on the top-left part of the screen if you do not see the AirTame instructions:



Present Wireles

1. Connect to KEN-125

Network: DIRECT-[xx]-KEN-125-

5. Connect your device to the AirTame with the instructions on the screen

Make sure to reconnect to the **Curry** network when you are finished sharing.

For best performance, only connect to the AirTame when you plan to share.

Students at home can share their screen to the class using the *Share Screen* button in their Zoom app. Make sure *Share computer sound* is selected on the student's computer.

The Laptop HDMI cable cannot be used to share in Zoom.

For assistance, please call the Tech Center at **x2911** or email techcenter@curry.edu